

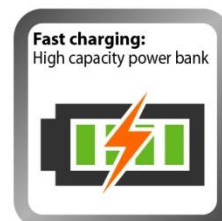


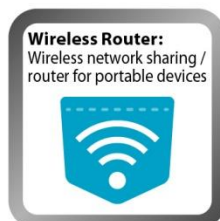

## Wi-Backup User Manual

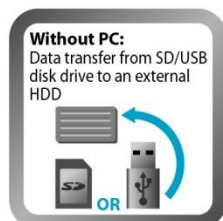

# SAFETY INSTRUCTIONS

Read through the following *Safety Instructions* before you start using the device.

- Place the device on a stable surface.
- Do not use the device in places that are exposed to oil, water, or dust.
- Do not wrap the device with clothing. This might cause heat to build up, resulting in fire.
- Do not place any heavy object on the top of the device.
- Do not drop the device. Doing so may cause device malfunction.
- Do not insert any foreign objects into the opening slots of the device.
- Do not expose the device directly to heated sources such as heaters or prolonged direct sunlight.
- Do not touch the device with wet hands.
- Do not use strong cleaning solvents to clean the device. Wipe the device with a slight damp soft cloth.
- Keep the device out of the reach of small children.
- Always handle the device with care.
- Do not try to disassemble or repair the device. Doing so may cause damage to the device and may void the warranty.
- Do not dispose the device via conventional domestic waste as it is embedded with a built-in battery. Please dispose it properly according to the local regulation.
- Keep this user manual in a convenient place so that you can refer to it if necessary.

# CONTENTS

<b>INTRODUCTION .....</b>	<b>5</b>
Features .....	5
Package Contents.....	5
Product Overview .....	6
Front View .....	6
Rear View .....	6
LED Indicators .....	7
<b>GETTING STARTED .....</b>	<b>8</b>
Charging the Device .....	8
Turning the Device On/Off.....	8
Installing a Memory Card/USB Flash drive .....	9
Installing a memory card.....	9
Installing a USB flash drive .....	9
<b>OPERATING YOUR DEVICE.....</b>	<b>10</b>
Single Touch Backup Function .....	10
Using Wi-Backup APP .....	11
Connecting to Your Mobile Devices .....	11
Viewing Files.....	13
Downloading Files .....	15
Uploading Files .....	18
Copying Files.....	20
Sharing Files.....	23
<b>NETWORK CONFIGURATION .....</b>	<b>24</b>
Configuring Wi-Fi Hotspot .....	24
Configuring Wi-Fi Repeater.....	26
Configuring Other Network Settings .....	28
Configuring Password for Wi-Fi Connection .....	28
Changing OSD Language .....	29
Resetting to Default .....	29
Changing Administrator Password.....	29

Advanced Settings .....	30
Setting Single Touch Backup Path .....	32
<b>APPENDIX .....</b>	<b>35</b>
Specifications .....	35
Charging Other Mobile Devices .....	36
Resetting the Device .....	36
Contacting Us .....	37

# INTRODUCTION

## Features


- Supports two-way transfer and sharing data wirelessly between a memory card / USB flash drive.
- Supports “One Touch Backup” and “Real-time Backup” to backup files from a memory card / USB flash drive to an external hard drive directly.
- Supports Power Bank feature for charging your mobile devices.
- Free downloadable APP for data management on Android and iOS devices.
- Wireless sharing of videos, photos, music, and documents.
- Supports up to 5 mobile devices to access files simultaneously.
- Built-in Lithium battery provides up to 12 hours of operation time.
- Built-in Ethernet port for portable wireless access point.
- Its compact design makes it ideal to bring and use when traveling.
- Bundled with a USB cable for charging.

## Package Contents

Carefully unpack and make sure the following items are included in the package.




Wi-Backup

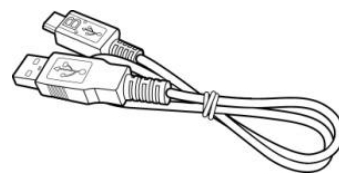

USB cable


# Product Overview

## Front View

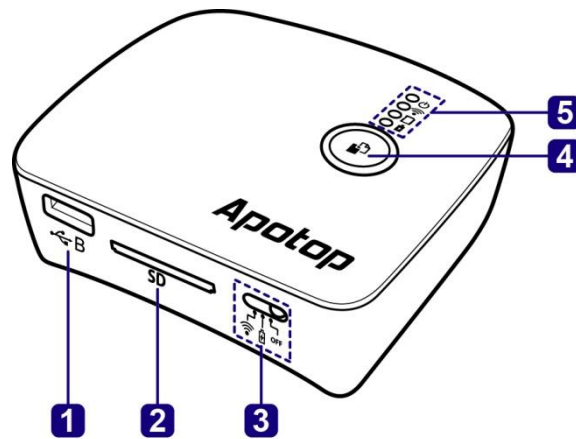

No.	Item	Description
1	USB 2.0 port (USB-B)	Connect USB storage devices such as USB flash drive or external hard disk drive.
2	Memory card slot	Insert a memory card.
3	Mode switch	Slide to switch to different mode.
4	One Touch Backup button	Press to transfer data between a memory card / USB flash drive to an external hard drive.
5	Status LEDs	Indicate the system operation status.


## Rear View

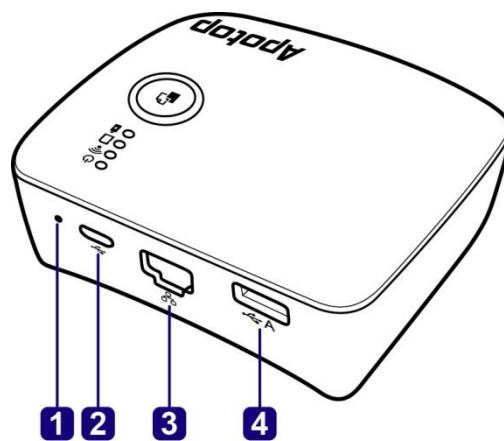

No.	Item	Description
1	Reset hole	Insert the pointed object to reboot the system.
2	Micro USB port	Connect a USB cable to charge the battery.
3	Ethernet port	Connect to a local area network (LAN) using a RJ-45 cable.
4	USB 2.0 port (USB-A)	Connect USB storage devices such as USB flash drive or external hard disk drive.

## LED Indicators

The LED color varies depending on the system and function status.

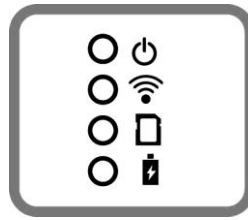

LED Type	LED Color	Description
Power (🔌)	Green	The device is turned on.
	Orange	The device battery is low.
Wi-Fi (📶)	Blue	Wi-Fi connection is active.
Media (📁)	Green	A memory card or USB drive is inserted into its respective slot/port.
Charging (🔋)	Red	Battery charging in progress.
	Off	Charging complete.


# GETTING STARTED

## Charging the Device

When the *Power LED* lights orange, you need to charge the device using the supplied USB cable.

1. Connect one end of the USB cable to the USB port of the device.
2. Connect the other end of the USB cable to the computer or power adapter of Smartphone/tablet.

The *Charging LED* lights red while the battery is charging. When the battery is fully charged, the *Charging LED* will automatically turn off.

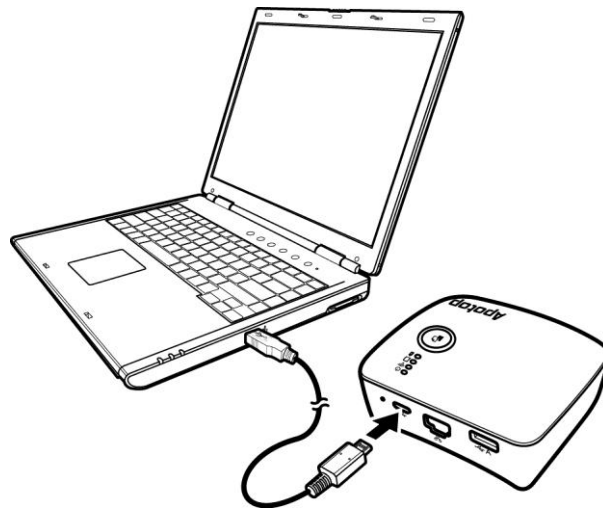

## Turning the Device On/Off

### To power on:

Slide the **Mode** switch to .

The *Power LED* lights green, indicating the device is turned on.

### Note:

- *The Wi-Fi function will be activated approximately 25 seconds (blinking blue light) after the device is turned on.*




### To power off:

Slide the **Mode** switch to **OFF**.



## Installing a Memory Card/USB Flash drive

This device is equipped with one memory card slot and two USB ports.

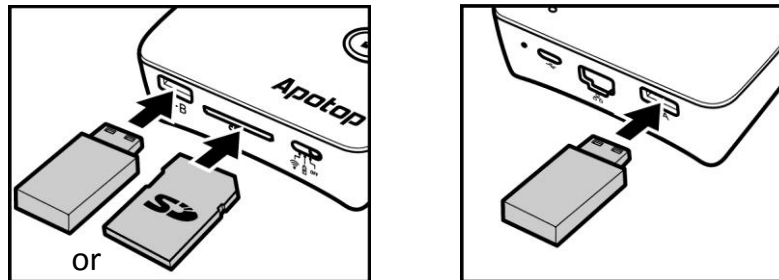

### Installing a memory card

Insert the memory card with the gold contacts facing down into its slot.

### Installing a USB flash drive

Plug the USB flash drive directly into the available USB port.


#### Note:

- *If you plug a USB flash drive to the USB port on the front of the device and install an SD card at the same time, the system will recognize the SD card as the first priority.*
- *Do NOT remove the memory card or USB flash drive while file transferring is in progress.*

# OPERATING YOUR DEVICE



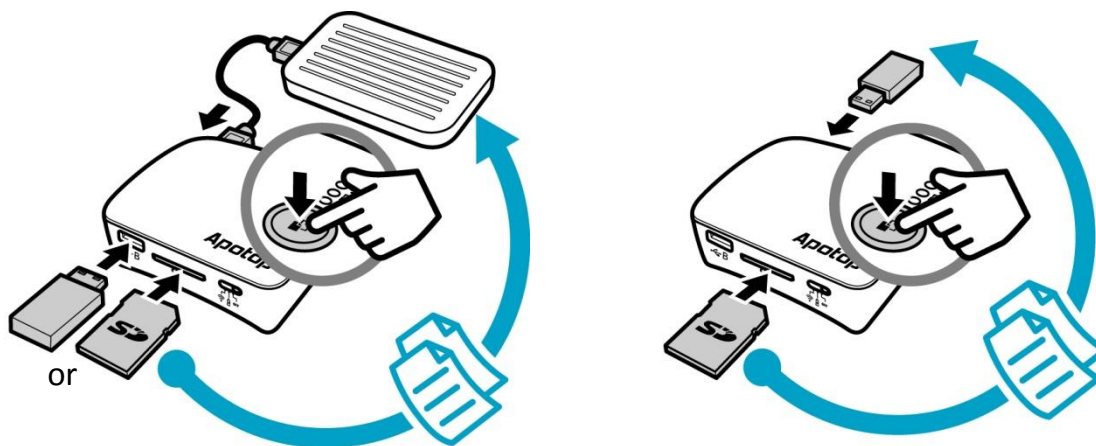

## Single Touch Backup Function

With this function, you can use this device as a card reader and backup files from a memory card / USB flash drive to an external hard drive directly.



1. Insert an SD card into the card slot or plug USB flash drive to the USB port.
2. Plug a USB flash drive or an external hard drive to the USB port on the rear of the device.
3. After the *Single Touch Backup LED* lights orange, press the **Single Touch Backup** button for more than 2 second to copy all files from the SD card / USB flash drive (USB-B) to a USB flash drive / HDD (USB-A). Wait until the *Single Touch Backup LED* lights green, indicating that the backup function is complete.
  - To cancel the backup function during the file transfer, press and hold the **Single Touch Backup** button until the *Single Touch Backup LED* lights green and fades out. Wait until the *Single Touch Backup LED* lights orange, indicating that the backup function is cancelled.

### Single Touch Backup LED Indicator

LED Color and Behavior	Description
 Orange (Solid)	Ready to copy files.
 Orange (Blinks)	File copying process in progress.
 Green (Solid)	File copying process is complete.
 Red (Solid)	File copying process is failed.

# Using Wi-Backup APP

## Connecting to Your Mobile Devices




## List of Supported Devices

Mobile Device Type	System Requirements
Android	Android OS 2.3~2.x, and 4.0~4.x
iOS	iOS 5.0 and above


## Initial Setup

### Step 1: Install APP

Download and install **Wi-Backup** APP from **Play Store / App Store**.

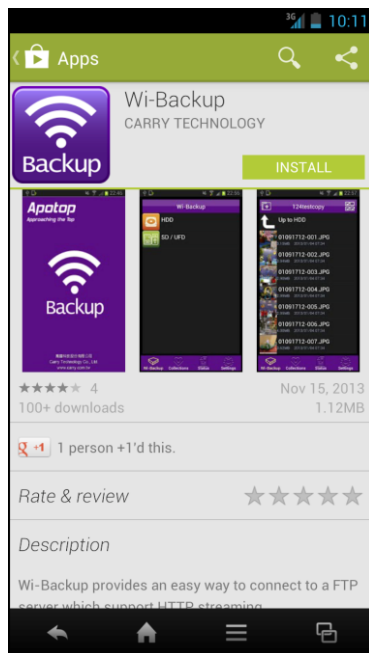


Android

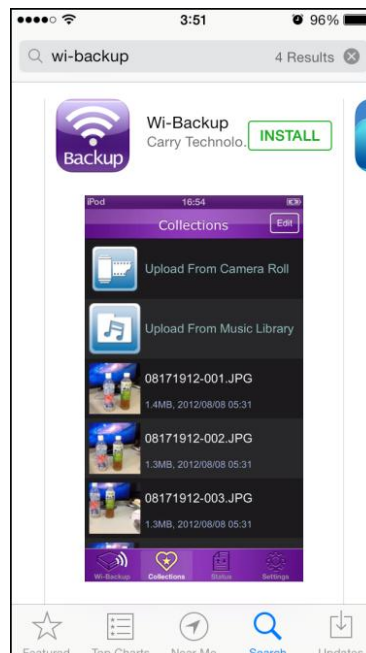

iOS

## Step 2: Power ON


Slide the **Mode** switch to . Refer to the “Turning the Device On/Off” section on page 8.

## Step 3: Connect to Your Mobile Device


1. On your mobile device, launch **Settings**.
2. Set the **Wi-Fi** setting to **ON**.

The available networks are listed.

3. Tap **Wi-Backup\_xxxxxx** to connect to the device.

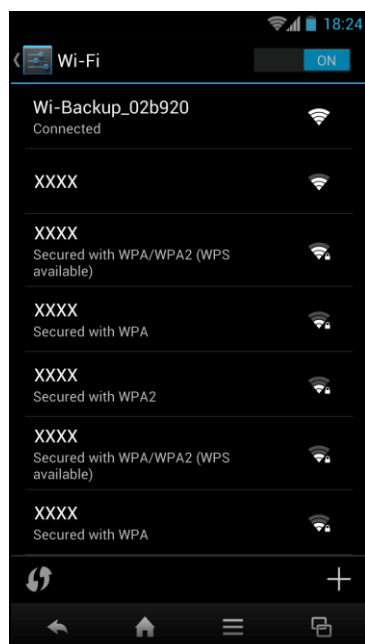

Android

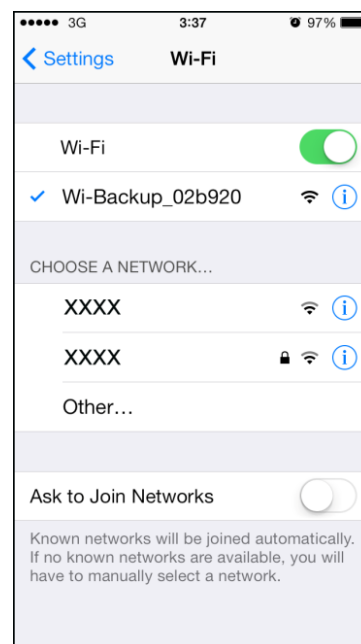

iOS

## Viewing Files

### Supported File Format


File Type	File Format
Video	M4V / MP4 / MOV
Music	MP3 / WAV / AAC
Picture	JPG / BMP / PNG
Document	PDF / DOC / PPT / TXT / HTM / XLS / PPTX / DOCX / XLSX

#### Note:


- To view document file:
  - On HTC/Samsung mobile devices, you can use **Polaris Office APP** to view the document.
  - On other Android devices, you can install **OliveOffice APP** or similar applications to view the document.
- To play media files (video or music):
  - On iPhone, you can use **OPlayer Lite APP** to play the media files. On iPad, you can use **OPlayer HD Lite APP** to play the media files.
  - On Android device, you can use **MX Player** or **Mobo Player APP**.

To view files stored in the memory card/USB flash drive, perform the following:

1. On your mobile device, launch **Wi-Backup APP**.
2. Browse the folder category. If you plug a single partition disk (< 128GB), there are four types of categories are displayed on the screen.

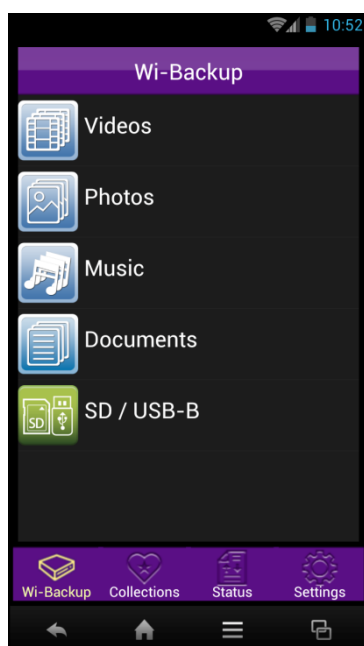

Android Device

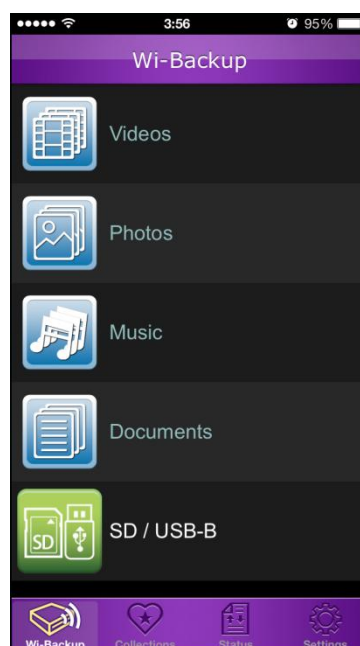


iOS Device


**Note:**

- To access all files directly on your USB flash drive or SD card, tap **SD/USB-B** or **USB-A**.

3. Tap the desired folder category and browse the files.

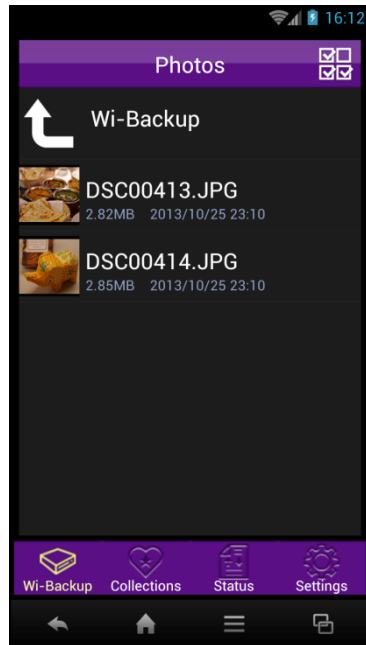

Android Device

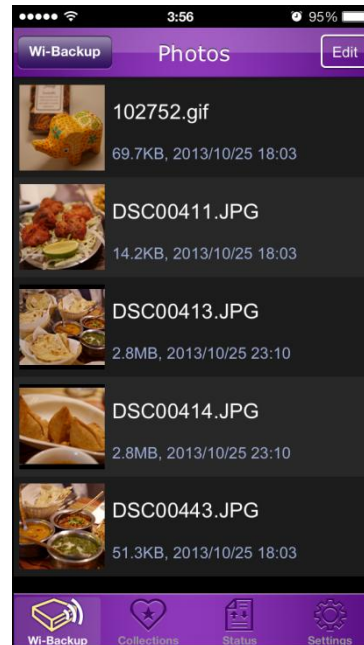


iOS Device

## Downloading Files


To save the desired file(s) stored in the memory card/USB flash drive into your mobile device, perform the following:

### Android Device


1. On your mobile device, launch **Wi-Backup** APP.
2. Select and hold the file that you want to download.
3. Select one of the following options:
  - **Save to Device Library:** Copy the file into your mobile device.
  - **Download to App:** Copy the file into **Collections** tab.

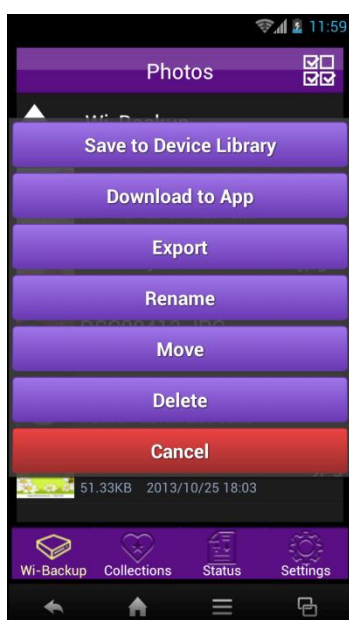

[Select option]

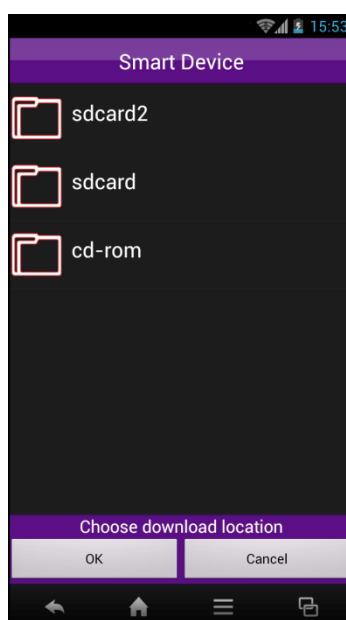

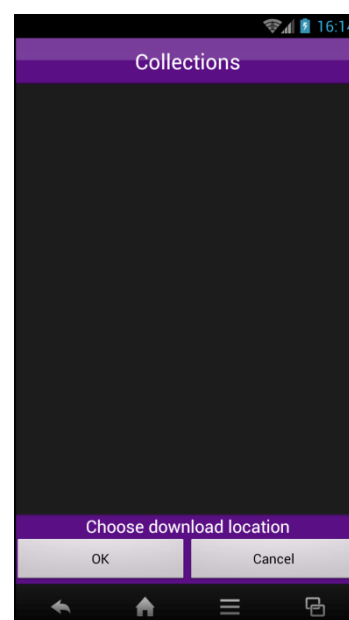

[Save to mobile device]




[Save to **Collections**]


### Note:

- To select several files at simultaneously, tap  and select the desired files. Then tap  to display the options menu.
- To rename the selected file, tap **Rename**.
- To move the selected file to another folder, tap **Move**.
- To delete the selected file, tap **Delete**.


4. Select the location where you want to save the file and tap **OK**.

## iOS Device


1. On your mobile device, launch **Wi-Backup** APP.
2. Browse the files and tap **Edit**.
3. Select the file that you want to download. Then tap  and select one of the following options:
  - **Save to library:** Copy the file into your iPhone/iPad (Camera Roll).
  - **Download:** Copy the file into **Collections** tab.

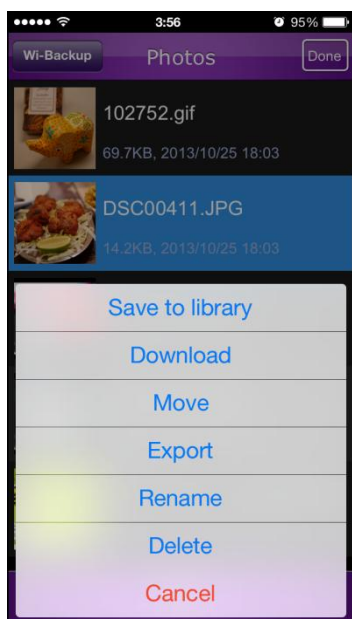


[Option1. Select > 1 file]

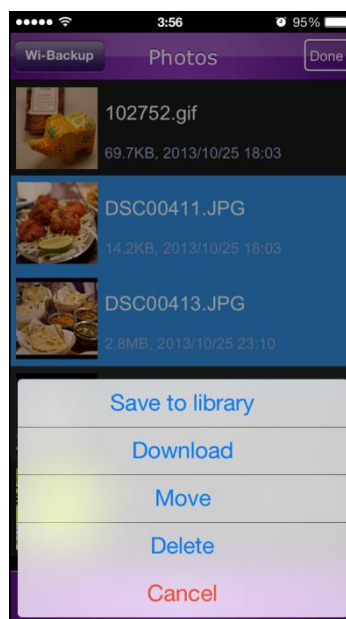

[Option 2. Select single file]

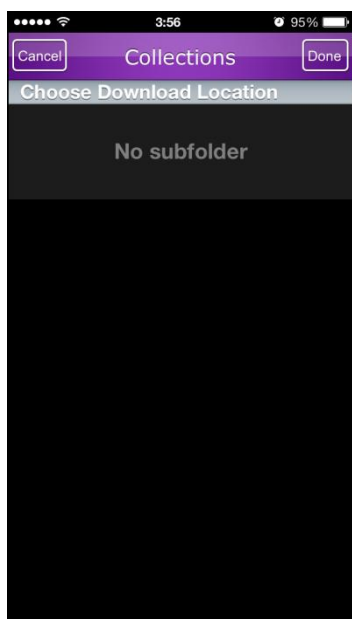

[Save to Collections]

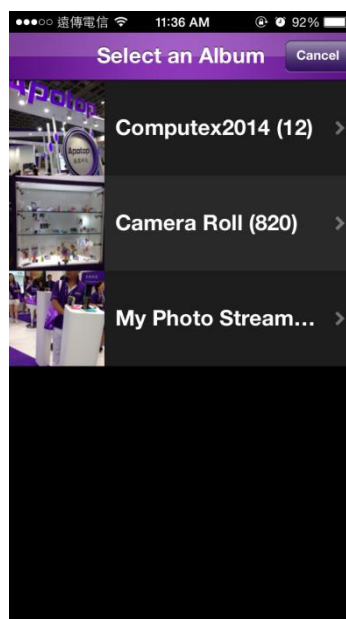

[Save to iPhone/iPad]



**Note:**

- *To rename the selected file, tap **Rename**.*
- *To move the selected file to another folder, tap **Move**.*
- *To delete the selected file, tap **Delete**.*


**4.** Select the location where you want to save the file and tap **Done**.

## Uploading Files


To upload the desired file(s) stored in your mobile device into the memory card/USB flash drive, perform the following:

### Android Device


1. On your mobile device, launch **Wi-Backup** APP. Then tap **Collections** tab.
2. Tap **Upload from Smart Device** and select the file that you want to upload.

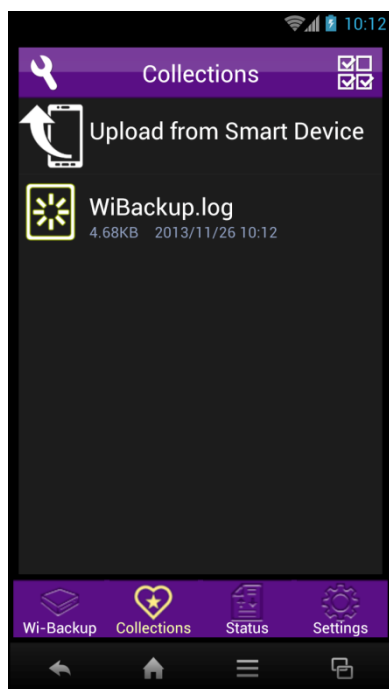

[Select option]

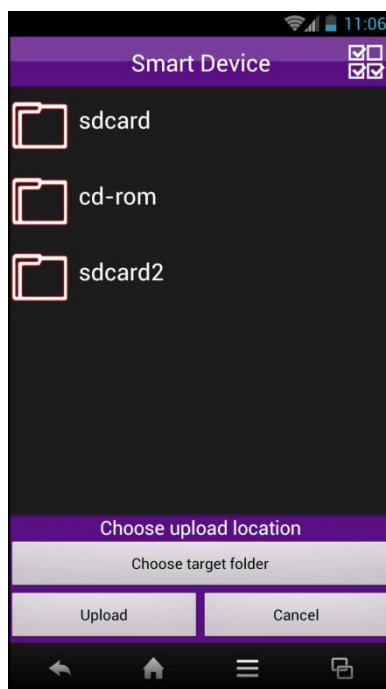

[Select the files and choose upload location]

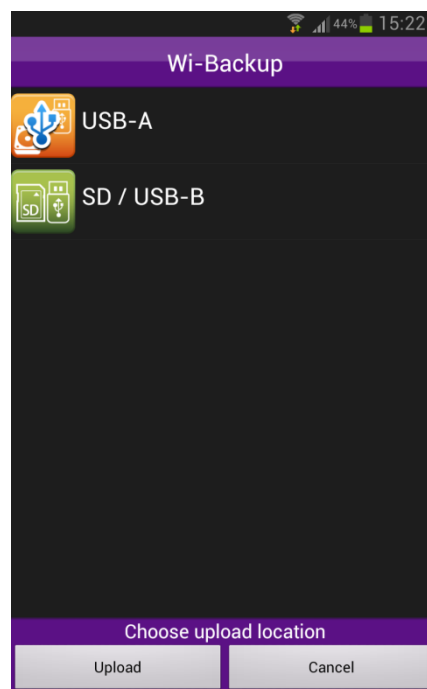

[Save to SD card/USB flash drive]


### Note:

- To select multiple files, tap  and select the desired files.


3. Then select the location where you want to save the file into the SD card/USB flash drive and tap **Upload**.

## iOS Device

1. On your mobile device, launch **Wi-Backup** APP. Then tap **Collections** tab.
2. Tap **Upload from Camera Roll** or **Upload From Music Library** and select the file(s) that you want to upload. When finished with the file selection, tap **Done**.

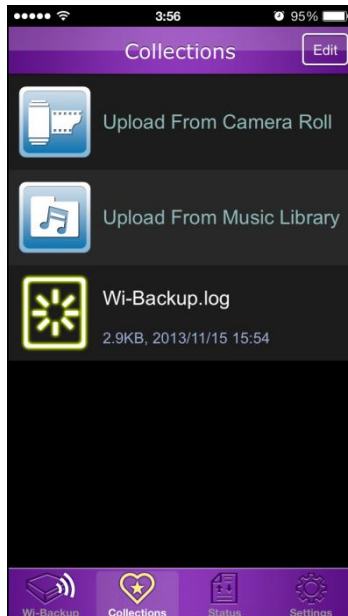

[Select option]

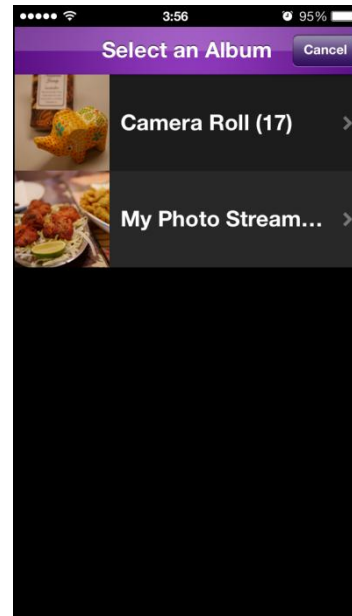

[Select file(s) to upload]


3. Then select the location where you want to save the file(s) into the SD card/USB flash drive and tap **Done**.

## Copying Files


To copy the file(s) stored in your SD card into the USB flash drive (or vice versa), perform the following:

### Android Device


1. Insert an SD card or a USB flash drive into its slot and plug a USB flash drive to the USB port on the rear of the device.
2. On your mobile device, launch **Wi-Backup APP**.
3. Tap **USB-A** or **SD/USB-B**.
4. Select and hold the file that you want to copy and then tap **Copy**.

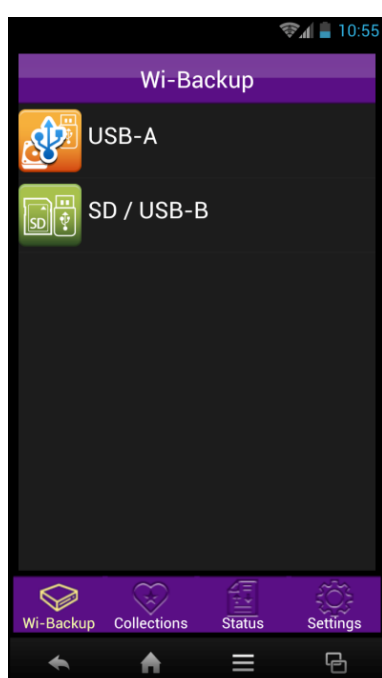

[Select option]

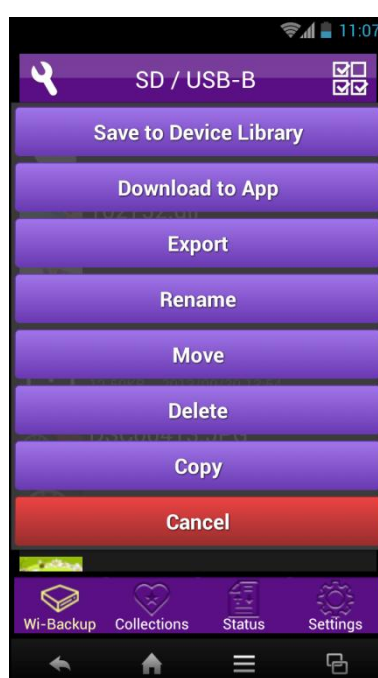

[Select and hold the file then select copy]

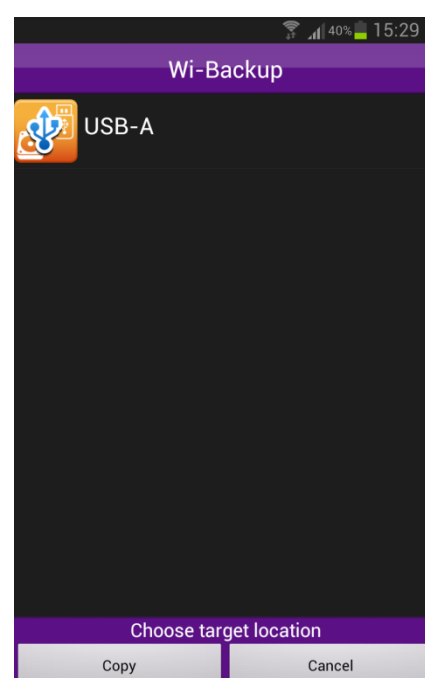


[Save to SD card/USB flash drive]

5. Then select the location where you want to save the file into the SD card/USB flash drive and tap **Copy**.


### **Note:**

- After the copy operation is complete, tap **Status** tab or review **Backup\_log.txt** from the root directory of the target device to check the Backup history.
- Do **NOT** remove the memory card or USB flash drive while file transferring is in progress.


## iOS Device

1. Insert an SD card or a USB flash drive into its slot and plug a USB flash drive to the USB port on the rear of the device.
2. On your mobile device, launch **Wi-Backup** APP.
3. Tap **USB-A** or **SD/USB-B**.
4. Browse the file and tap **Edit**.
5. Select the file that you want to copy and then tap  > **Copy**.


Ex. When select single file:

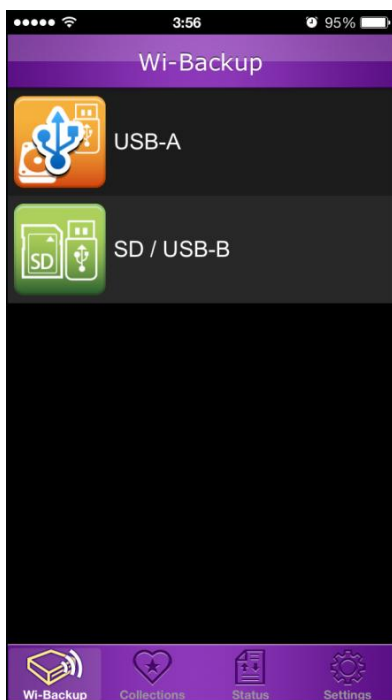

[Select option]

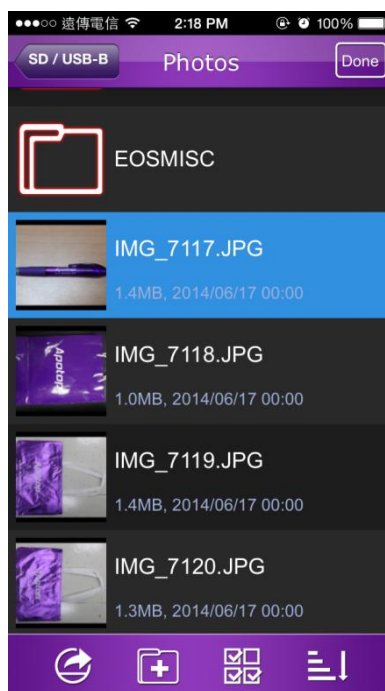


[Select single file]

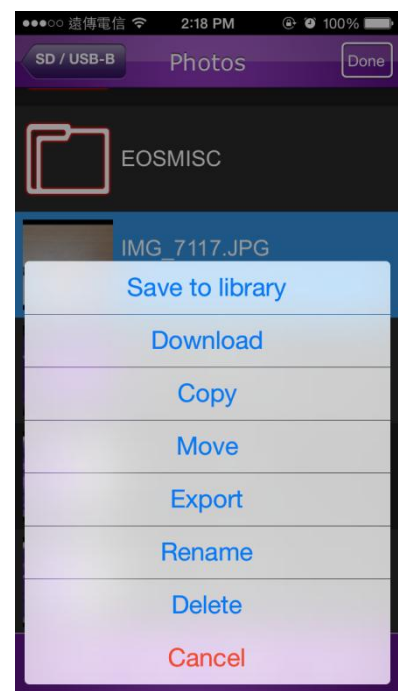


[Tap Copy to save to SD card/USB flash drive]


Ex. When select multiple files:

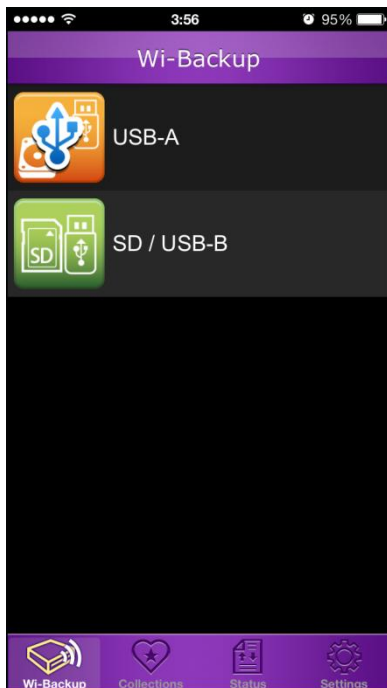

[Select option]

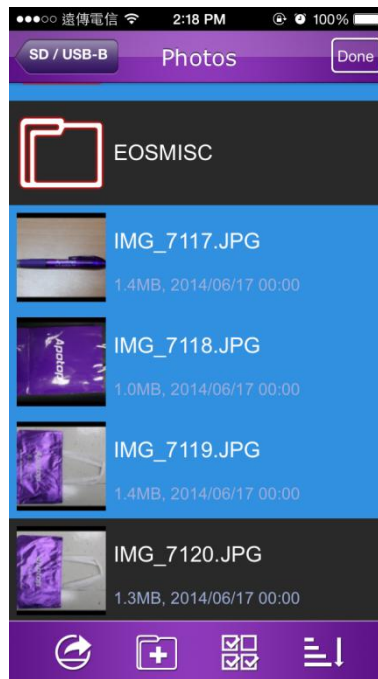

[Select multiple files]

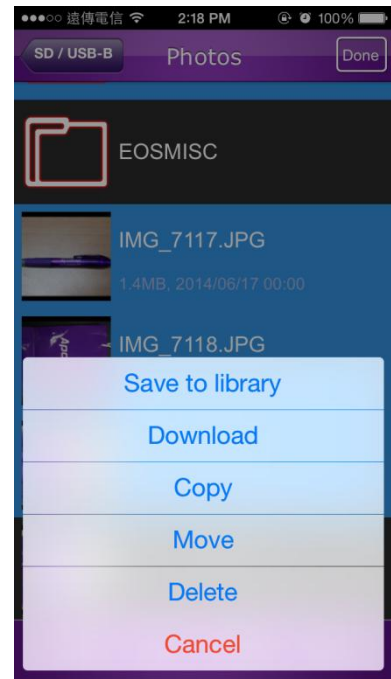

[Tap Copy to save to SD card/USB flash drive]

6. Then select the location where you want to save the file into the SD card/USB flash drive and tap **Done**.

**Note:**

- After the copy operation is complete, tap **Status** tab or review **Backup\_log.txt** from the root directory of the target device to check the Backup history.
- Do NOT remove the memory card or USB flash drive while file transferring is in progress.

## Sharing Files

To share files via a sharing application, perform the following:


1. On your mobile device, launch **Wi-Backup APP**.


2. Select the file to share.

- Android Device


Tap and hold the file that you want to share and tap **Export**.

- iOS Device

Browse the file and tap **Edit**. Then select the file that you want to share and tap  > **Export**.

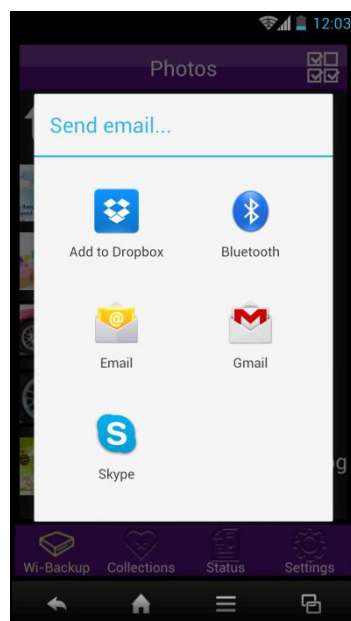

Android

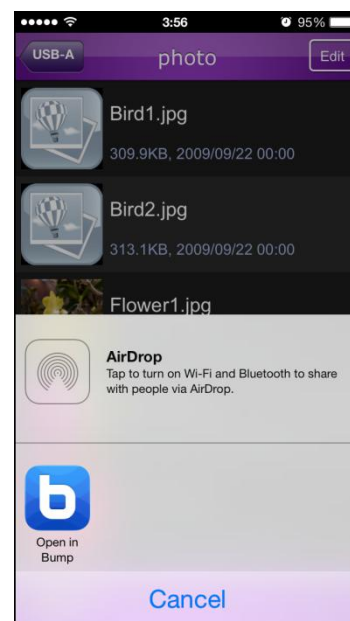

iOS

3. Select the desired sharing application.


### Note:

- *The available sharing application varies depending on the applications installed in your mobile device.*

# NETWORK CONFIGURATION


## Configuring Wi-Fi Hotspot

You can configure this device as a gateway and enable you to use this device as a wireless access point.

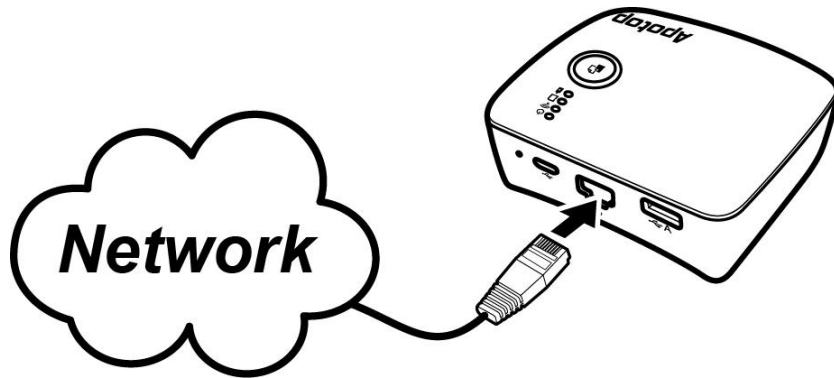


To configure this function, perform the following:

1. Connect one end of the RJ-45 cable to the Ethernet port of the device.
2. Plug the other end of the RJ-45 cable to the Ethernet port on a router or network switch.
3. On your mobile device, launch **Wi-Backup** APP.
4. Tap **Settings** tab.
5. Tap **Device Setting > Gateway(WAN)**.
6. The **WAN Interface Setup** page appears. Select the type of internet connection you are using.

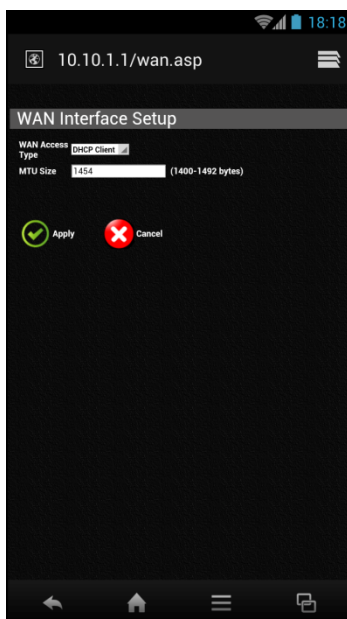

Android

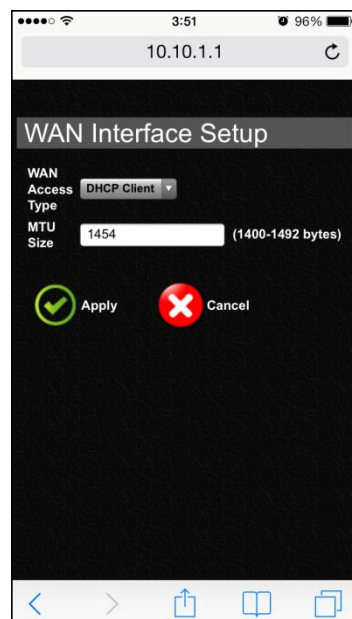

iOS



**Note:**

- *Please contact your local Internet Service Provider (ISP) if you are not sure about the type of network connections you are using and the required parameters to complete the system configuration.*

7. Tap **Apply**. The system will automatically reboot.
8. To use the Wi-Fi connection, simply connect your portable device (i.e. tablet, notebook, or Smartphone) to the device. See “Connecting to Your Mobile Devices” on page 11.

## Configuring Wi-Fi Repeater


This device also supports Wi-Fi Repeater function. When your mobile device is getting poor Wi-Fi signal from this device, you can connect this device to an available wireless router to extend the range of the Wi-Fi network.

To configure this function, perform the following:

1. On your mobile device, launch **Wi-Backup** APP.
2. Tap **Settings** tab.
3. Tap **Device Setting** > **WiFi Repeater**. The available networks are listed.
4. Tap the desired wireless network.




Android

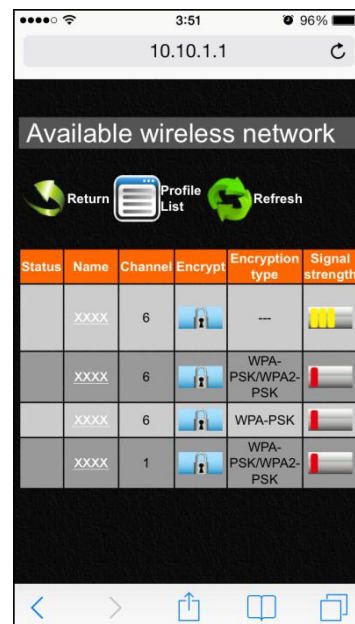


iOS

**Note:**

- *Some networks require a network security key or a password. Enter the password and tap **Connect**.*

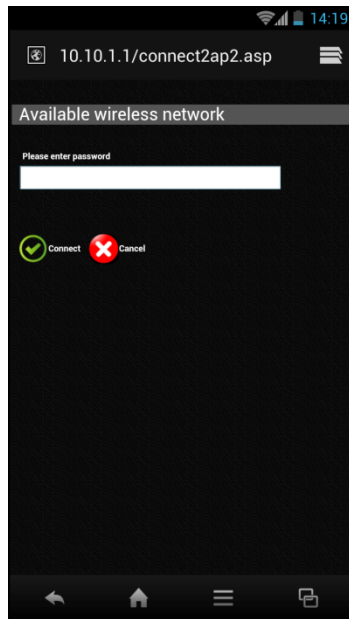

Android

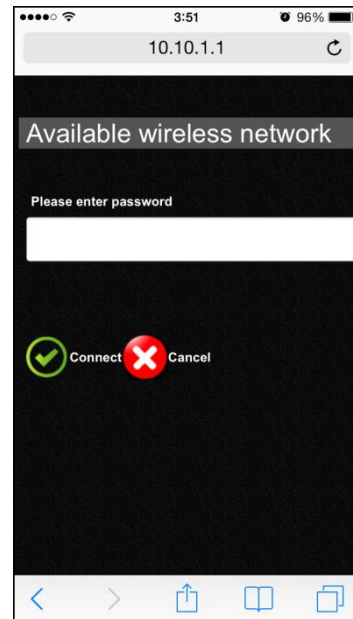

iOS

## Configuring Other Network Settings

1. On your mobile device, launch **Wi-Backup** APP.
2. Tap **Settings** tab.
3. On **Device Setting** page, you can also configure the Wi-Fi setting connection, change the OSD language, reset to default, and other advanced settings.

### Note:


- Tap **Home** to return to **File Server** page.
- The **Advanced Settings** option is reserved for advanced configuration only. It is recommended not to alter these settings unless instructed by our Customer Service.

## Configuring Password for Wi-Fi Connection


To prevent unauthorized access to this device, we highly recommend you create a password.

To configure a password, perform the following:

1. On your mobile device, launch **Wi-Backup** APP.
2. Tap **Settings** tab.
3. Tap **Device Setting** > **WiFi Setting**.
4. The **WiFi AP Setting** page appears. Select the encryption type and enter the password.

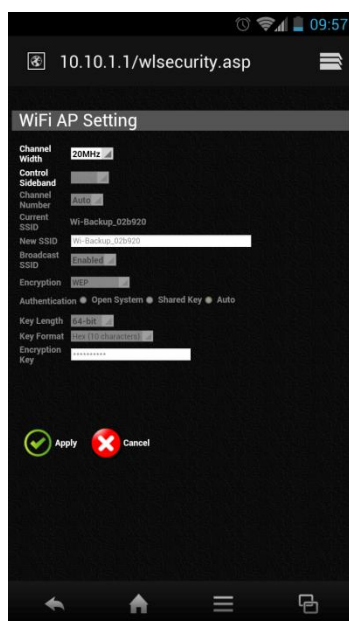

Android

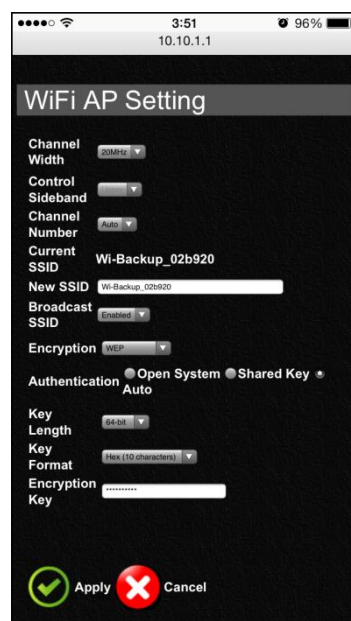

iOS

5. Tap **Apply** to save the settings.

## Changing OSD Language

To change the on-screen display (OSD) language, perform the following:

1. On your mobile device, launch **Wi-Backup** APP.
2. Tap **Settings** tab.
3. Tap **Device Setting > Multiple Language**.
4. Select the desired language and tap **Apply** to save the settings.

## Resetting to Default

To restore all parameters to the default settings, perform the following:

1. On your mobile device, launch **Wi-Backup** APP.
2. Tap **Settings** tab.
3. Tap **Device Setting > Reset to Default**.
4. A confirmation message appears on the screen. Tap **OK** to reset the device.

## Changing Administrator Password

To set or change the user name and password, perform the following:

1. On your mobile device, launch **Wi-Backup** APP.
2. Tap **Settings** tab.
3. Tap **Device Setting > Admin. Password**.
4. The **Password Setup** page appears. Configure the following options:
  - **New User Name:** Enter the new user name.
  - **New Password:** Enter the new password.
  - **Confirmed Password:** Reenter the new password.
5. Tap **Apply** to save the settings.


## Advanced Settings

### ➤ Setting DLNA


1. On your mobile device, launch **Wi-Backup** APP.
2. Tap **Settings** tab.
3. Tap **Device Setting > Advanced Settings > DLNA**

#### Note:

- *The default setting is Disable, tap **Enable** > **Apply***
- *After 5 seconds in rebooting, the DLNA setting is done.*

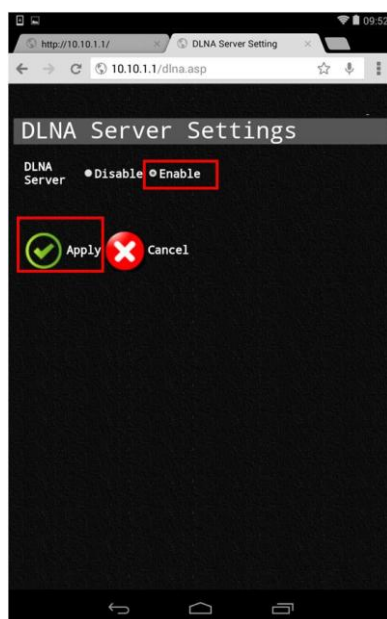

Android

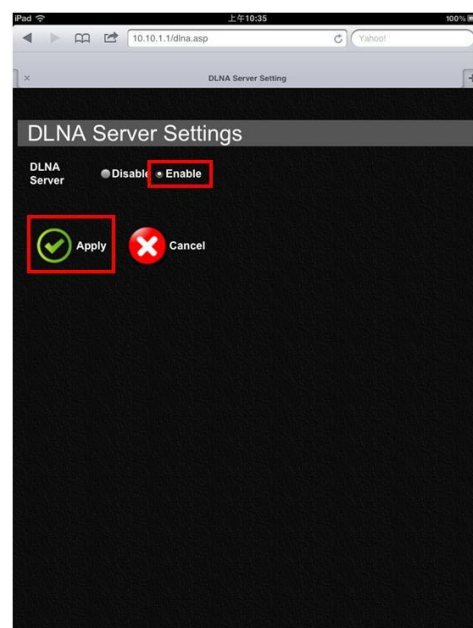


iOS

## ➤ Setting Samba


1. On your mobile device, launch **Wi-Backup APP**.
2. Tap **Settings** tab.
3. Tap **Device Setting > Advanced Settings > Samba**

### Note:

- *The default setting is Disable, tap **Enable** > **Apply***
- *After 20 seconds in rebooting, the Samba setting is done.*

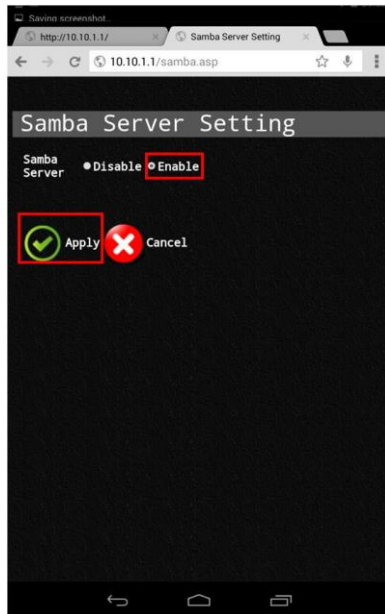

Android

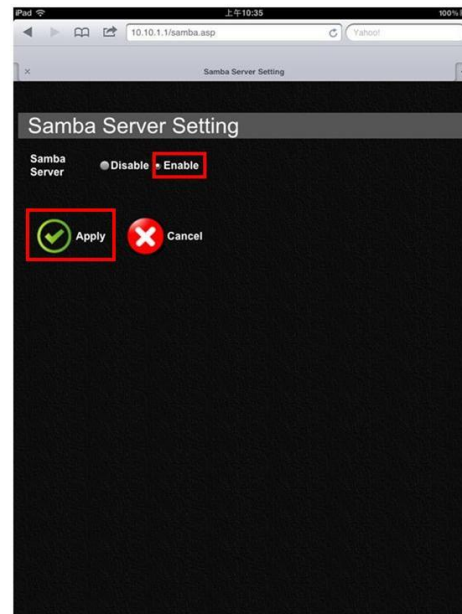

iOS


## Setting Single Touch Backup Path

To configure this function, perform the following:

1. On your mobile device, launch **Wi-Backup** APP.
2. Tap **Settings** tab
3. Tap **Set One Touch Backup Path** tab

### Note:

- *The **Set One Touch Backup Path** page appears.*
- *Default Settings: Source Path / sdb1(USB/SD), Target Path / sda1(USB)*

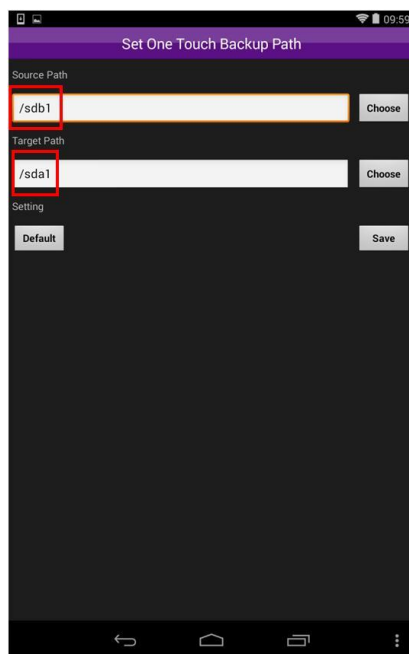


Android




iOS



4. Tap **Choose** tab, then select desired backup source path.

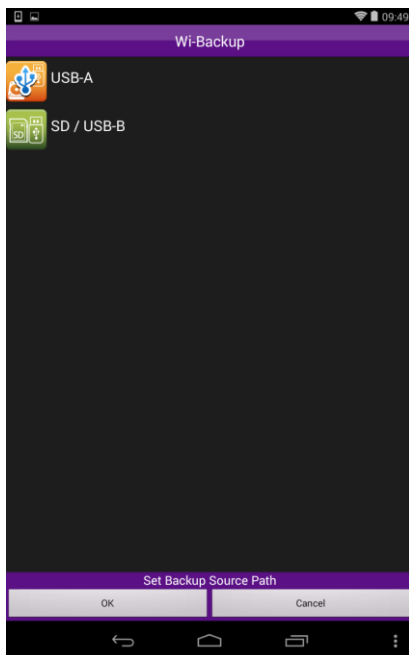


Android

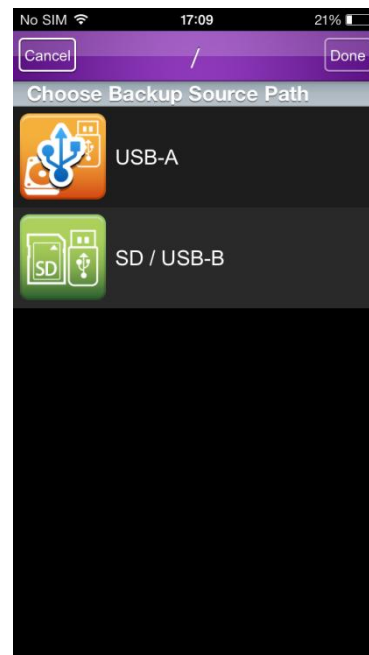

iOS

(Ex: Select **USB-A**)

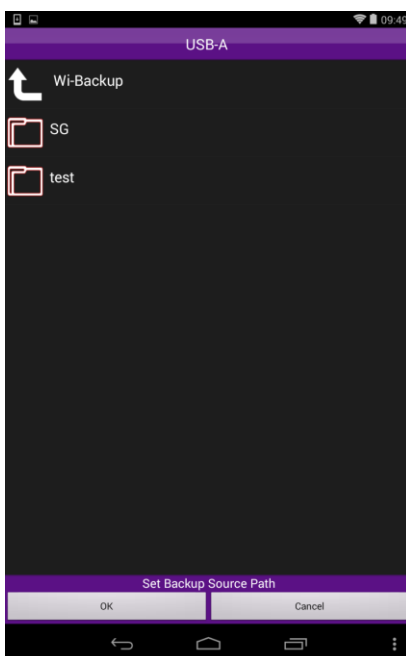


Android




iOS

5. Select the folder you would like to backup files, then tap **OK** tab.

(Ex: Select **SG** folder)

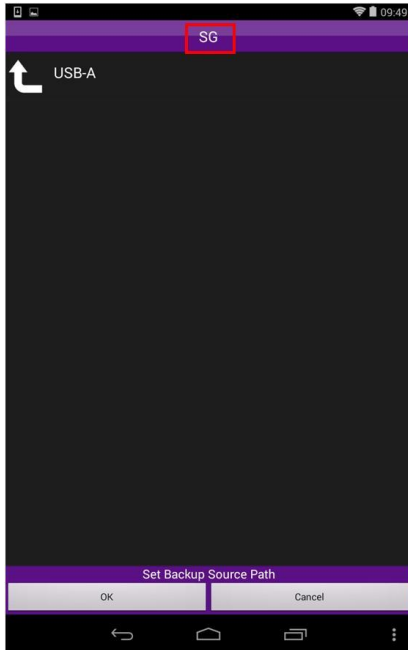


Android

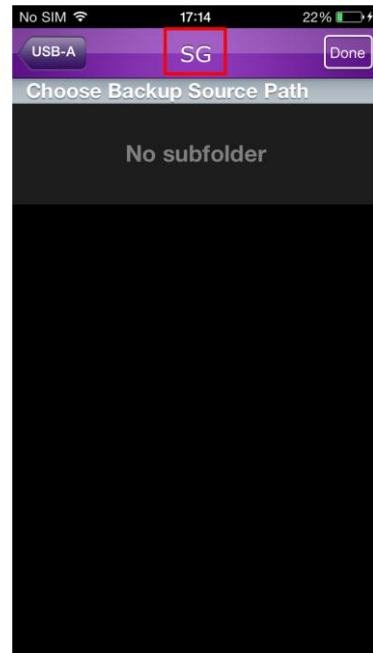

iOS

6. Tap **Save** tab to save the path settings.

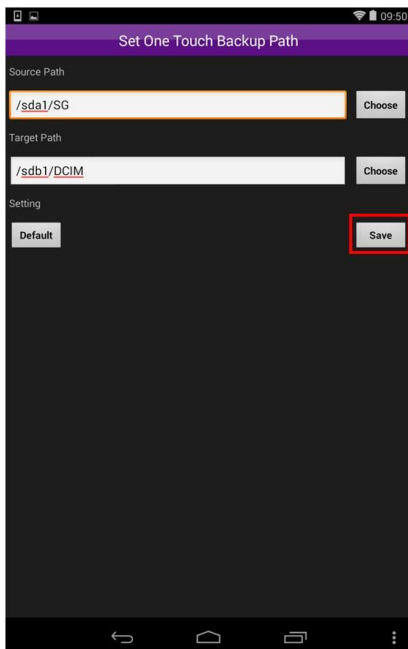

Android



iOS


# APPENDIX


## Specifications

Item	Specifications
<b>Hardware Specifications</b>	
Standard	IEEE 802.11b/g/n standards compliant
Wireless LAN	1T1R Mode (150Mbps)
Antenna	Exclusive built-in PCB Antenna
Interface	<ul style="list-style-type: none"><li>• Micro USB Port for PC Card Reader Mode / USB Charger Mode</li><li>• RJ45 (WAN Port)</li><li>• Reset (3Sec) button</li><li>• Slide Switch for Wireless Mode &amp; Power Bank Mode</li><li>• Push Button Key for Single Touch Backup Mode</li><li>• USB-A for USB-HDD (Max. 1A) /</li><li>• USB-B for UFD / Power Bank Mode (Max. 2.0A)</li><li>• Memory Card I/F for SD / SDHC / SDXC / MMC</li></ul>
Frequency Range	2.400 ~ 2.4835 GHz (subject to local regulations)
Data Rate	<ul style="list-style-type: none"><li>• 802.11n: up to 150Mbps</li><li>• 802.11g: 6,9,12,18,24,36,48,54Mbps</li><li>• 802.11b: 1,2,5.5,11Mbps</li></ul>
Coverage Area	Up to 3 times faster than existing 802.11b/g product
Battery Type	Li-Polymer Rechargeable Battery It provides up to 12 hours of operation time based on SDHC 32GB with MP4 Video File (1.42GB_2Hours) Continuous Playback
DC Power Input for Recharge	DC5V Power Input (max. 1A) is designed for recharge (depending on the USB Adapter / Port)
<b>Software Specifications</b>	
WAN	<ul style="list-style-type: none"><li>• DHCP Client</li><li>• Static IP</li><li>• PPPoE (for ADS,L etc)</li></ul>
Wi-Fi	<ul style="list-style-type: none"><li>• Channel Number selection</li><li>• 20MHz / 40MHz channel bandwidth selection</li><li>• Support updating different SSID / Password</li><li>• Support WiFi Repeater &amp; Gateway Mode</li><li>• High security supported: WEP 64 / 128 bit, WPA, WPA2, WPA2 Mixed</li></ul>
File System for SD/SDHC/SDXC, UFD / USB-HDD	<ul style="list-style-type: none"><li>• FAT16/32 (VFAT) File System</li><li>• exFAT File System</li><li>• NTFS File System</li></ul>

## Charging Other Mobile Devices


You can use this device as a *Power Bank* to charge another mobile device.

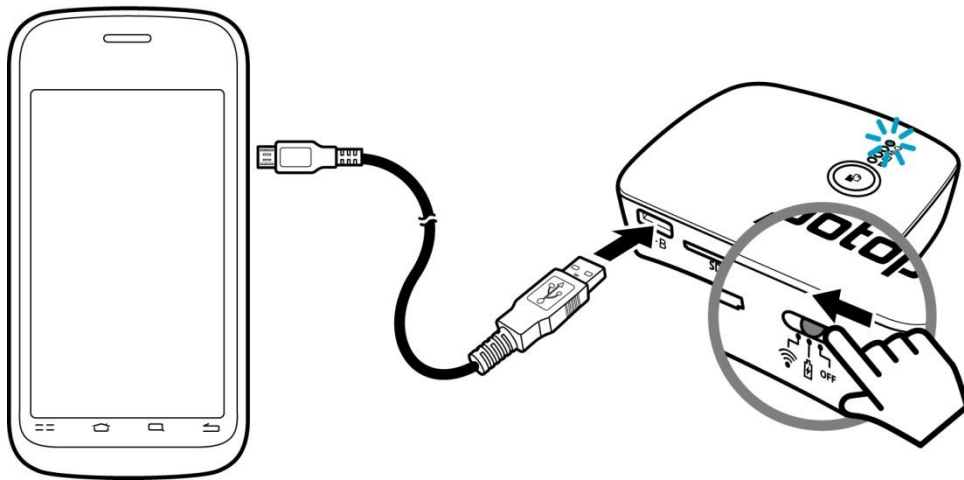

1. Connect one end of the USB cable to the USB port of the device.
2. Connect the other end of the USB cable to the USB port of your mobile device.
3. Slide the **Mode** switch to . The battery charging will start automatically.
4. Disconnect the USB cable when the charging process is complete.

## Resetting the Device

When the device hangs, insert a pointed object such as a paper clip into the **Reset Hole** for four seconds until the *Wi-Fi LED* turns off.

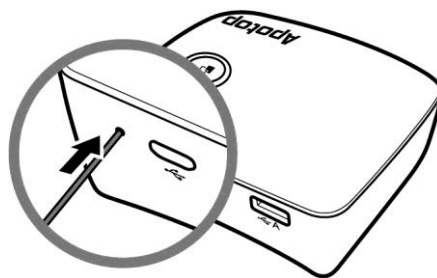

The system will automatically reset all parameters to the default settings and reboot.

## Contacting Us

When you encounter any problem while using this device, try to reset the device as described in the previous section.

If the problem still persists, you can contact us by using the **Send Feedback** option in the **Settings** (**Wi-Backup** APP) or by visiting [www.apotop.com/tw](http://www.apotop.com/tw).